




Wireless Double Talk Headset

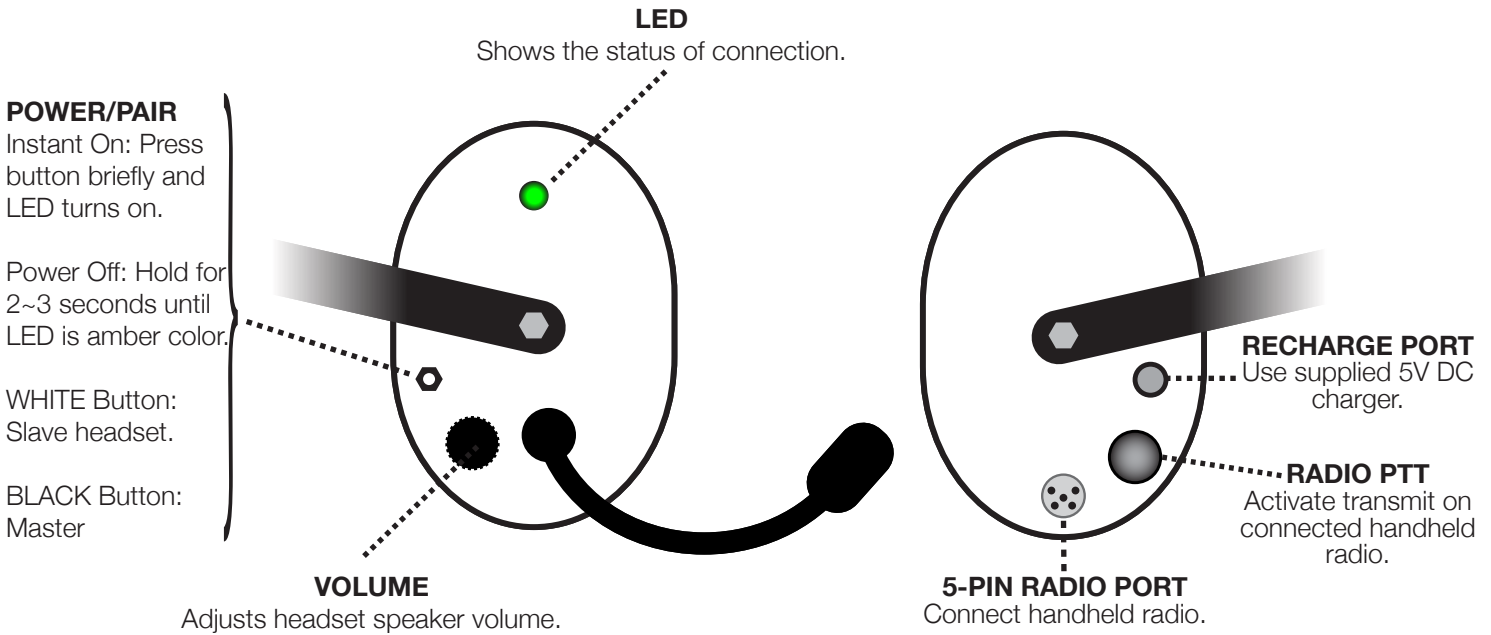

CHECK BATTERY LEVEL

LED : Count the Amber blink at powering up. 3 blinks = +80%, 2 blinks = 30~80%, 1 blink = below 30%.
SOUND : Count the "BEEPS" at power up. 3 beeps = +80%, 2 beeps = 30~80%, 1 beep = below 30%

LOW BATTERY WARNING

If you hear a "BEEP" every 1 min while the headset is active, the headset battery is low and needs to be charged (usually, it takes 4 hours for the full charge).

HOW TO PAIR

The new set is already paired and do not require pairing; Pairing is only required for a replacement unit.

- Make sure the headset power is off.
- Start with the slave unit. Press the Power/Pair button for 7~8 seconds until you hear "beep beep beep" or watch for the LED change from green to amber. The Master unit will beep once every five seconds. Complete pairing and auto-connection takes about 45 ~ 50 seconds. Once the pairing is established, pairing is not required again.

ELECTRICAL SPECIFICATIONS

RF type.....	Bluetooth 2.1 Class 1
Frequency	2.400 – 2.485 GHz
Max transmit	+20 dBm
RF sensitivity	-90 dBm
Range	1000 Ft with a line of sight (external antenna)
.....	500 Ft with a line of sight (internal antenna)
Battery	3.7v Li-Ion 1500mAh
Charging Voltage.....	5V DC only
Operation life	At least 24 hours with continuous connection after full charge
Charging time.....	3 ~ 5 hours