

# Nitro Bee PLUS Operating Instructions

The Nitro Bee PLUS UHF Receiver features Radio Override so race operations will override radio communications with crew.



**NITRO  
BEE** 

## BASIC OPERATION

- To power on or off, press and hold ON/OFF button
- Adjust volume with VOL buttons
- Adjust Channel with CH buttons

## SQUELCH CONTROL (P1)

- Make sure Nitro Bee PLUS is powered off
- Press and hold ON/OFF and FUNCTION buttons for a few seconds
- When display is active, tap ON/OFF button until display reads P1-3
- Press the CH button to cycle through squelch settings (range 2-7)
- Press FUNCTION to save squelch setting
- Press and hold ON/OFF button to turn Nitro-Bee off

## CHANGE DEFAULT CHANNEL (MODE P2)

- Make sure Nitro Bee PLUS is turned off
- Hold ON/OFF and FUNCTION buttons down until Nitro Bee turns on
- Tap ON/OFF button until screen says P2-0
- Use volume buttons VOL to change freq/channel
- When on desired freq/channel, press FUNCTION button once to save
- Press and hold ON/OFF button to turn Nitro-Bee off

## CTCSS/DCS TONE CODES (MODE P3)

- Make sure Nitro Bee PLUS is powered off
- Press and hold ON/OFF and FUNCTION buttons for a few seconds
- When display is active, tap ON/OFF button until display reads P3-0
- Press the CH buttons to cycle through CTCSS/DCS tone codes
- Press FUNCTION to save tone code setting
- Press and hold ON/OFF button to turn Nitro-Bee off

## BUTTON LOCK

- Make sure Nitro Bee PLUS is powered ON
- Press and hold ON/OFF and FUNCTION buttons until CH flashes
- To unlock, repeat the locking process

