

# User Guide

## Power On/Off

- To power on the radio, twist the power knob clockwise. A short tone followed by your current channel will confirm radio power is on.
- Twist the power knob counter clockwise to power off the radio.

## Changing Channels

- Twist the channel knob clockwise to change channel up.
- Twist the channel knob counterclockwise to change channel down.

## Changing Zones

- Long press the ZONE button until it beeps.

**Zone 1: Analog Channels 1-16 (Channel 16 is Listen Only)**  
**Zone 2: Digital Channels 17-32**

## Transmitting (TX)

- Press and hold the **PTT** button on the left side of your device.
- Release the **PTT** button when finished transmitting.

## Monitor a Channel (Analog Only)

- Short press the **M** button located on the left side of the radio to temporarily enable or disable the preset squelch function of the device and monitor for weak signals on the selected channel.


## Battery Indicator

- Press and hold the **M** button.

**3 Beeps:** Battery is full

**2 Beeps:** Battery is halfway charged

**1 Beep:** Battery is low

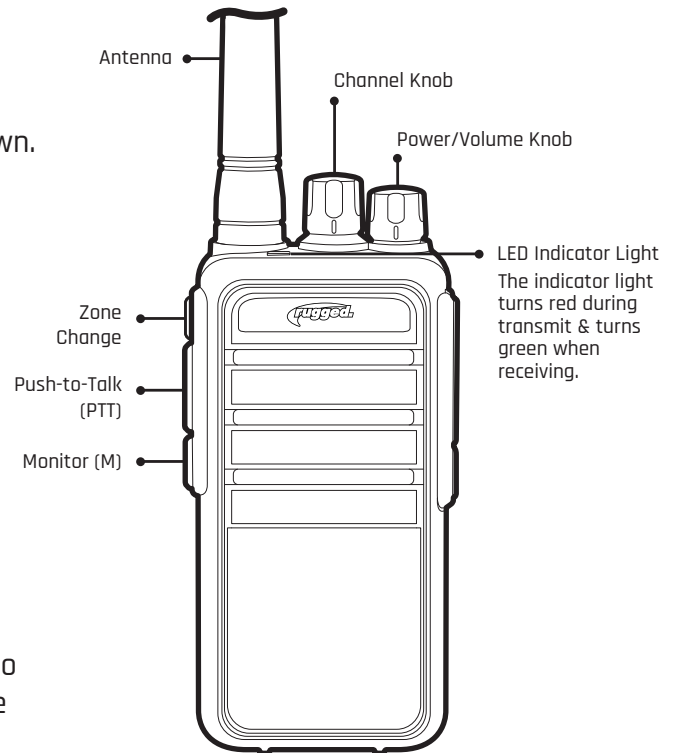

## ANALOG CHANNEL LIST

Ch. #	Name	Ch. #	Name
1	WXMAN	9	CHKRS2
2	BFGRLY	10	BFGPIT
3	RUGGED1	11	MAG7
4	NETWRK	12	RUGGED3
5	CHKRS1	13	CORE
6	RUGGED2	14	LOCOMO
7	YOKO	15	RUGGED4
8	BITDRLY	16	L PCIRL

## DIGITAL CHANNEL LIST

Ch. #	Name	Ch. #	Name
17	SAND3	25	HERBST2
18	SAND5	26	JEFRIES
19	SAND6	27	SKILTON
20	HANSEN	28	RIVERA2
21	HUNT2	29	SOURPS2
22	DUKES2	30	TAYLOR2
23	ENDURO	31	MARKING
24	HERBST1	32	WILSON2